

EMERGENCY PROCEDURE TABS*Vlt. John M. Metrock 0107716***NAVAIR 01-85ADB-1B***UMSR***NATOPS POCKET
CHECK LIST****EA-6A
AIRCRAFT**

THIS PUBLICATION SUPERSEDES
NAVAIR 01-85ADB-1B
DATED 1 NOVEMBER 1968,
CHANGED 1 APRIL 1969
WHICH SHOULD BE REMOVED
FROM THE FILES AND
DESTROYED

ISSUED BY AUTHORITY OF
THE CHIEF OF NAVAL OPERATIONS
AND UNDER THE DIRECTION OF THE
COMMANDER, NAVAL AIR SYSTEMS COMMAND

PERFORMANCE DATA INDEX**LIFT TAB**

1. T/O - Ground Run
2. T/O - 50 Ft Obstacle
Minimum Lift Off Speed
3. Air Start
4. Precautionary Approach
5. Range Vs Fuel - Sea Level
6. Range Vs Fuel - 10,000 Ft.
7. Normal Landing Distance
Range Vs Fuel - 20,000 Ft.
Range Vs Fuel - 30,000 Ft.
Climb/Cruise - Selected Altitude
8. Minimum Landing Distance
9. Landing Gear Malfunction
10. Maximum Glide Distance
Field Arrestment Data
Airspeed Indicator Failure
Crosswind Component (Back Cover)

FIRE**1****T/O EMER****2****ENGINE FAIL****3****HYD SYS FAIL****4****ELEC SYS FAIL****5****CAUTION LIGHTS****EJECTION****6****LANDING EMER****7****FLAP/SLAT MALF****8****GEAR MALF****9****GROUND EMER****10**