


## INSTRUMENT BOARD (TYPICAL)

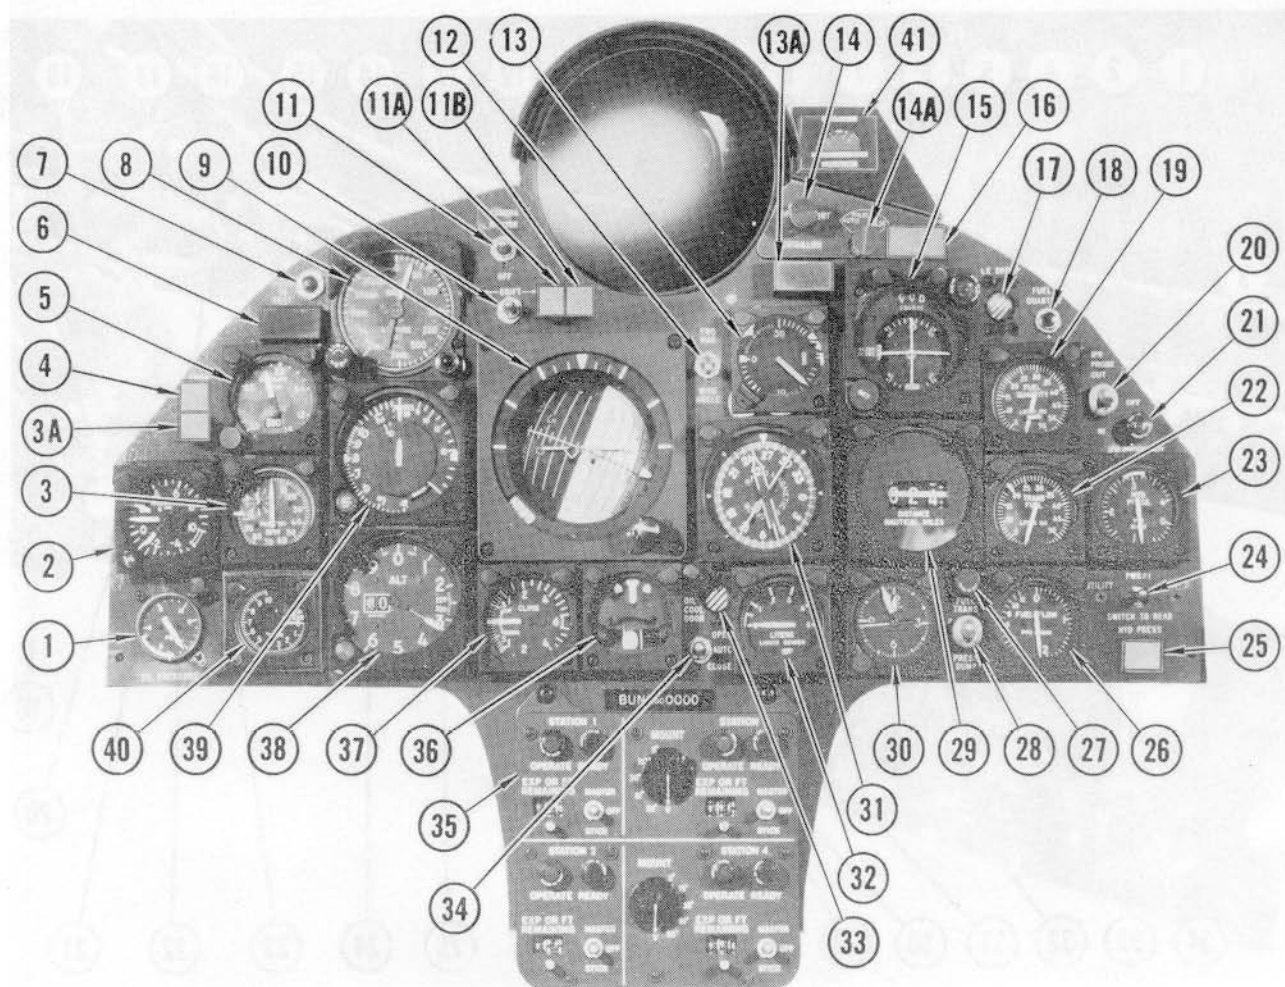

- |   |  |                                      |
|---|--|--------------------------------------|
| 1. Engine oil pressure indicator  | 13. Angle-of-attack indicator                      | 26. Fuel flow indicator              |
| 2. Acceleration indicator   | 13A. Oxygen warning light**                        | 27. Transfer fuel pump caution light |
| 3. Tachometer   | 14. Grid illumination switch                       | 28. Fuel transfer switch             |
| 3A. Engine fuel pump warning light  | 14A. Mode switch***                                | 29. Range indicator                  |
| 4. Fuel low-level warning light   | 15. Course indicator                               | 30. Clock                            |
| 5. Engine pressure ratio indicator<br>or Turbine outlet pressure<br>indicator*) | 16. Wing-wheels droop warning light                | 31. Radio magnetic indicator         |
| 6. Fire warning light   | 17. Leading edge droop indicator                   | 32. Liquid oxygen indicator          |
| 7. Fire warning test switch   | 18. Fuel quantity test switch                      | 33. Oil cooler door indicator        |
| 8. Radar altimeter  | 19. Fuel quantity indicator                        | 34. Oil cooler door switch           |
| 9. Attitude indicator   | 20. Inflight refueling probe switch                | 35. Camera station control panel     |
| 10. Drift correction switch   | 21. Inflight refueling probe out light             | 36. Turn-and-bank indicator          |
| 11. Camera operation switch   | 22. Transfer fuel quantity indicator               | 37. Rate-of-climb indicator          |
| 11A. Speed brake open light   | 23. Hydraulic pressure indicator                   | 38. Altimeter                        |
| 11B. Fuel boost pumps warning light   | 24. Hydraulic pressure selector switch             | 39. Airspeed-Mach number indicator   |
| 12. View selector switch  | 25. Engine oil/hydraulic pressure<br>warning light | 40. Exhaust temperature indicator    |
|   |  | 41. Exposure indicator               |

\*) Aircraft without ASC 4.

\*\*Aircraft BuNo. 145618 and subsequent.

\*\*\*Aircraft with ASC 428.

Figure 1-3