
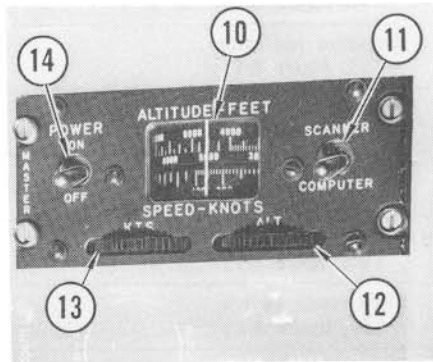
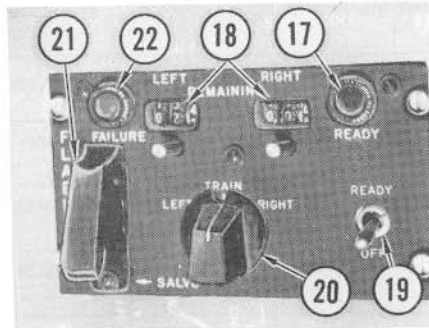
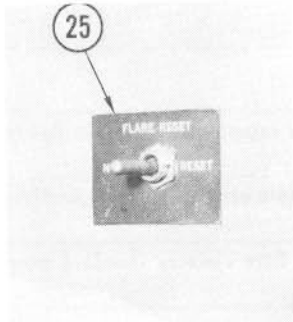
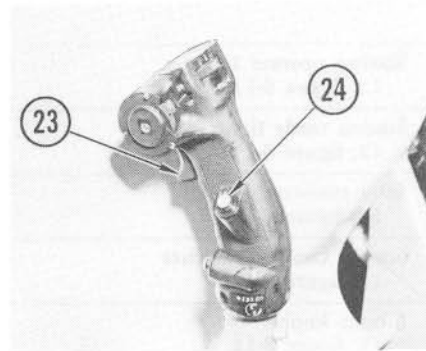
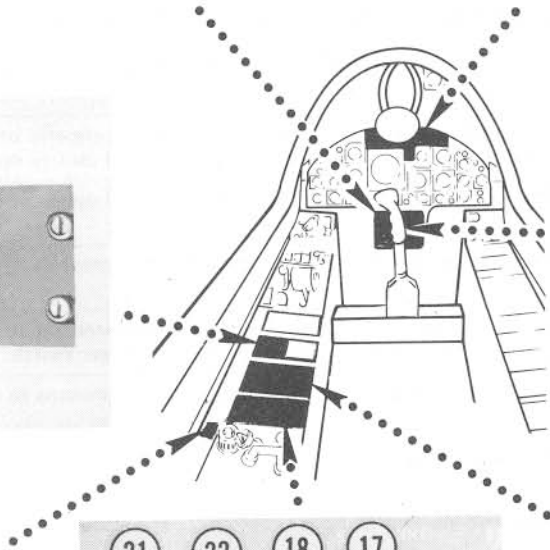
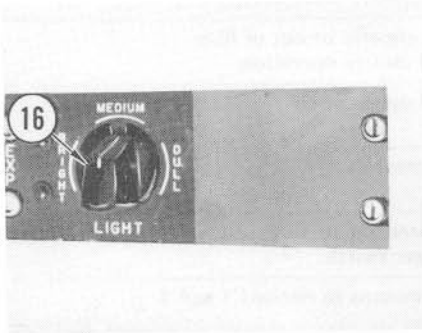
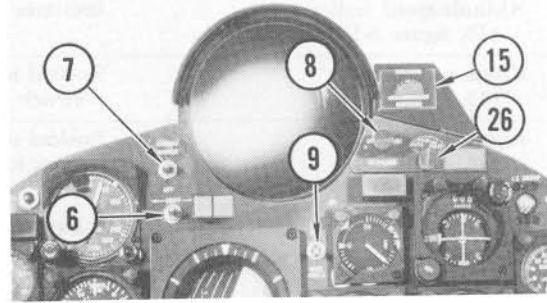


PHOTOGRAPHIC SYSTEM CONTROLS

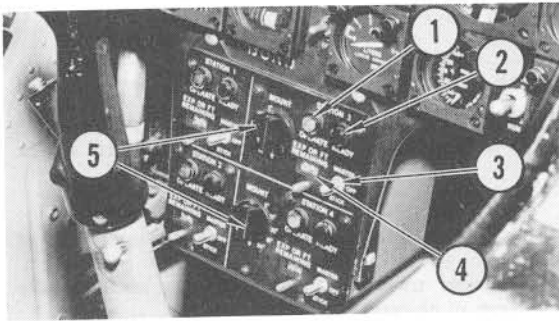

- | | |
|-------------------------------------|---------------------------|
| 1. Station operate light (typical) | 14. Camera power switch |
| 2. Station ready light (typical) | 15. Exposure indicator |
| 3. Station control switch (typical) | 16. Exposure control |
| 4. Film counter (typical) | 17. Flare ready light |
| 5. Mount knobs | 18. Flare counters |
| 6. Drift correction switch | 19. Flare arming switch |
| 7. Camera operation switch | 20. Flare selector switch |
| 8. Grid illumination switch | 21. Flare salvo switch |
| 9. View selector switch | 22. Flare failure light |
| 10. Altitude - speed indicator | 23. Camera trigger switch |
| 11. Scanner - computer switch | 24. Extra picture switch |
| 12. Altitude control | 25. Flare reset switch |
| 13. Knots control | 26. Mode switch |

72282-4-10

Figure 8-1